### **ELECTRICAL** DC Power supply (from LDB) 18 - 36 VDC, nominal 24 VDC DC Power consumption idle current @ 200 FIM's (Full load) 100 mA continious 2.4W max. power consumption AMP input (100V audio) max. cont. 100Vrms max. AC voltage max. AC current max. cont. 8A AC Frequency range 40Hz - 20kHz (-3dB) **LOOP** output AC same as AMP input DC voltage 30V DC current max. cont. 130mA Maximum total LOOP load 800 W 2-wire. Max. 2,5mm2 / Max. Loop length: 1000m Wiring Grounding optional earth loop through third connection pin Loop relay contact rating max. 250VAC / 8A (Dual state type) Bus address range 00 - FF (0-255) / max. 32 on single DIN-rail bar **Detection - LOOP** Short, wire-to-wire / Open / Earth leakage Maximum # FIM connected 200 Mechanical Housing Bopla Combinorm-Connect - DIN rail version - IP30 Dimensions (WxHxD) 17.5 x 114.5 x 99 mm Ordering information. Part No. LDB-03 1x IP30 housing with PCB 1x 5-pole DIN-rail bus connector / 1x 5-pole screw connector for DIN-rail bus / 2x 3-pole screw connector / 1x 2-pole screw connector **Certification and Approvals** Complies with EN54-16:2008 / NEN2575-2 **EMC** immunity EN50130-4:2011 / 152240002/AA/00

## **LOOP**DRIVE

# **LoopDrive Booster - LDB**



The Loop Drive Booster (LDB) is the heart of the Loopdrive system. This device drives up to 200 FIM's over a dual-core cable. A single LDB can pass 800 W of audio signal from an amplifier and injects at the same time DC to the loop for powering and managing FIM modules. One amplifier channel can be split into multiple LDB in parallel, creating multi-loop with individual surveillance for multi-zone paging applications.

The housing clicks on a DIN-rail that provides DC-power and accommodate for the RS485 data connection and General-Fault contact to a maximum of 32-LDB's on a single DIN-rail. Front buttons and indicators allow for quick access to the various functions and indications of the Loopdrive system.








# **LOOP**DRIVE

# **LoopDrive Booster - LDB**

The LDB is equipped with clearly marked connectors. The LDB has a LOOP - PRIMARY and LOOP-SECONDARY connection that are not sensitive for feeding direction. LOOP has a DC-carrier for charging and communication purpose to FIM. Please observe correct connectivity:

RED = PHASE / PLUS BLUE = ZERO / MINUS

**GREEN = GROUND (If applicable)** 

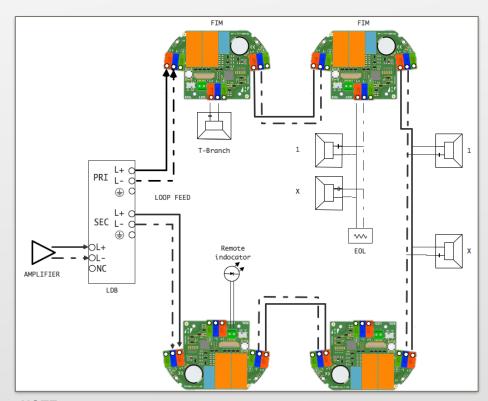


### NOTE:

The maximum number of loudspeakers between FIM's is not limited within the maximum LOOP-load of 800W, however, National standards may limit the amount of loudspeakers between Isolators.


Earth connector is available for optional earth-wire loop detection.

# etect - Locate - Isolate

LDB-QIG - V01R03 Quickguide

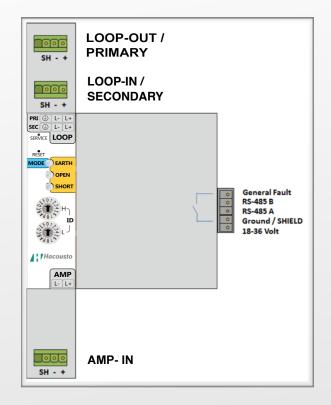

During fault status, the LoopDrive Booster, LDB, is feeding both loop-branches simultaneously and the fault is indicated by the status LED's on both FIM's and LDB's. The LED indicator(s) on the LDB are flashing with intervals to indicate the error. The FIM restores the faulty partition of the Loop-branch-lines to normal condition when the short or open circuit condition is removed and a general reset command is given by pressing the RESET button on the corresponding LDB. Please refer to the User and Installation manual V01R01 for entailed information on the various indications and functions.

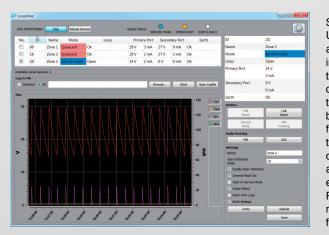

SNIFFER is a comprehensive Graphical User Interface (GUI) that let you automate the commissioning and installation of a Loopdrive system with up to 256 LDB-units over a single RS485 connection. Sniffer is not only visualising the various commissioning procedures but also provide streamlined methods for fault-finding and device allocating without the direct need for a digital communication protocol over the 2-wire audio line's. It fulfils the user's needs and expectations by far.

Please refer to the PC-application manual: Loopdrive-PCAPP-V01R01-2014 for detailed information.